



NOTES:

- Installation should be completed by an individual familiar with the construction and operation of the luminaire.
- Installation of luminaire must be in accordance with nation and local building and electrical codes.
- Carefully read and follow all warnings and instructions before installing or servicing the luminaire.
- Do not restrict luminaire ventilation.
- Ensure luminaire is not covered with material that will prevent convection or conduction cooling.
- Do not exceed luminaire's maximum ambient temperature.
- Ensure LED luminaire has the correct polarity before installation.

⚠ IMPORTANT SAFETY INFORMATION: READ AND FOLLOW ALL INSTRUCTIONS:

Electric current can cause serious injury or death. For your safety follow these precautions:

- Product must be installed following all national and local codes by a qualified technician.
- Turn off power before product installation, servicing, and removal.
- Ensure supply voltage corresponds with the correct ballast/driver voltage.
- Avoid exposing wiring to metal edges and sharp objects.
- Properly ground the fixture and do not operate fixture without covers in place.

⚠ RISK OF FIRE:

The Luminaire must be connected to the mains supply according to its ratings on the product label. Use only UL approved wire for input/output connections. Minimum size 18 AWG. Keep flammable and combustible materials away from the light source and/or lens. Use correctly rated supply conductors as indicated by product labeling.

TO PREVENT PERSONAL INJURY:

- Allow luminaire to cool before handling luminaire.
- Wear safety glasses and gloves when handling luminaire to avoid physical injury.
- LED lights are extremely bright – care should be taken not to look directly at the light source. Safety glasses with tinted lenses are recommended (ANSI Z87.1 or equivalent).
- Always support the weight of the luminaire.

Vyv is not responsible for any injuries due to the improper installation or handling of its products.

NOTE: Fixtures must never be lifted from sides or ends, lift fixtures only by cradling in arms until they are supported uniformly by mounting system.

Installation Instructions

AVAILABLE MOUNTING OPTIONS:


Please see the separate Supplemental Installation Instructions based on the selected mounting method. The following mounting methods are available for this product and must be selected upon ordering of product:

Code	Description	Supplemental Installation Instructions
<u>AC</u>	Adjustable Aircraft Cable (48" Standard)	INS-426
<u>P</u>	Pendant / Canopy (24" Standard)	INS-427
<u>SP</u>	Swivel Pendant / Canopy (45"/24" Standard)	INS-428
<u>S</u>	Surface	INS-429
<u>W</u>	Wall	INS-430
<u>T</u>	T-Grid	INS-431
<u>FL</u>	Flanged	INS-432
<u>FLTRM</u>	Flangeless (For Mud In)	INS-433

FIXTURE DIMENSIONS (ALL UNITS IN INCHES):

NOMINAL LENGTH	PENDANT / SWIVEL PENDANT / AIRCRAFT CABLE			SURFACE			WALL (WIDTH INCLUDES WALL BOXES)			T-BAR (WIDTH INCLUDES RAILS)			FLANGED (WIDTH INCLUDES FLANGES)		
	A		B	A		B	A		B	A		B	A		B
	D	I / DI		D	I / DI		D	I / DI		D	I / DI		D	I / DI	
8 FEET IND	89	92	2.5	89	N/A	2.5	89	89	3.5	95.75	N/A	3.25	91	N/A	4.5
BOR	89	92	2.5	89	N/A	2.5	89	89	3.5	89.38	N/A	3.25	90	N/A	4.5
INT	89	90.5	2.5	89	N/A	2.5	89	89	3.5	89	N/A	3.25	89	N/A	4.5
EOR	89	90.5	2.5	89	N/A	2.5	89	89	3.5	89.38	N/A	3.25	90	N/A	4.5
7 FEET IND	78	81	2.5	78	N/A	2.5	78	78	3.5	83.75	N/A	3.25	80	N/A	4.5
BOR	78	81	2.5	78	N/A	2.5	78	78	3.5	N/A	N/A	3.25	79	N/A	4.5
INT	78	79.5	2.5	78	N/A	2.5	78	78	3.5	78	N/A	3.25	78	N/A	4.5
EOR	78	79.5	2.5	78	N/A	2.5	78	78	3.5	83.75	N/A	3.25	79	N/A	4.5
6 FEET IND	66.75	69.75	2.5	66.75	N/A	2.5	66.75	66.75	3.5	71.75	N/A	3.25	68.75	N/A	4.5
BOR	66.75	69.75	2.5	66.75	N/A	2.5	66.75	66.75	3.5	72.38	N/A	3.25	67.75	N/A	4.5
INT	66.75	68.25	2.5	66.75	N/A	2.5	66.75	66.75	3.5	66.75	N/A	3.25	66.75	N/A	4.5
EOR	66.75	68.25	2.5	66.75	N/A	2.5	66.75	66.75	3.5	71.75	N/A	3.25	67.75	N/A	4.5
5 FEET IND	55.75	58.75	2.5	55.75	N/A	2.5	55.75	55.75	3.5	59.75	N/A	3.25	57.75	N/A	4.5
BOR	55.75	58.75	2.5	55.75	N/A	2.5	55.75	55.75	3.5	N/A	N/A	3.25	56.75	N/A	4.5
INT	55.75	57.25	2.5	55.75	N/A	2.5	55.75	55.75	3.5	55.75	N/A	3.25	55.75	N/A	4.5
EOR	55.75	57.25	2.5	55.75	N/A	2.5	55.75	55.75	3.5	59.75	N/A	3.25	56.75	N/A	4.5
4 FEET IND	44.5	47.5	2.5	44.5	N/A	2.5	44.5	44.5	3.5	47.75	N/A	3.25	46.5	N/A	4.5
BOR	44.5	47.5	2.5	44.5	N/A	2.5	44.5	44.5	3.5	N/A	N/A	3.25	45.5	N/A	4.5
INT	44.5	46	2.5	44.5	N/A	2.5	44.5	44.5	3.5	44.5	N/A	3.25	44.5	N/A	4.5
EOR	44.5	46	2.5	44.5	N/A	2.5	44.5	44.5	3.5	47.75	N/A	3.25	45.5	N/A	4.5
3 FEET IND	33.5	36.5	2.5	33.5	N/A	2.5	33.5	33.5	3.5	35.75	N/A	3.25	35.5	N/A	4.5
BOR	33.5	36.5	2.5	33.5	N/A	2.5	33.5	33.5	3.5	N/A	N/A	3.25	34.5	N/A	4.5
INT	33.5	35	2.5	33.5	N/A	2.5	33.5	33.5	3.5	33.5	N/A	3.25	33.5	N/A	4.5
EOR	33.5	35	2.5	33.5	N/A	2.5	33.5	33.5	3.5	35.75	N/A	3.25	34.5	N/A	4.5
2 FEET IND	22.5	25.5	2.5	22.5	N/A	2.5	22.5	22.5	3.5	23.75	N/A	3.25	24.5	N/A	4.5
BOR	22.5	25.5	2.5	22.5	N/A	2.5	22.5	22.5	3.5	N/A	N/A	3.25	23.5	N/A	4.5
INT	22.5	24	2.5	22.5	N/A	2.5	22.5	22.5	3.5	22.5	N/A	3.25	22.5	N/A	4.5
EOR	22.5	24	2.5	22.5	N/A	2.5	22.5	22.5	3.5	23.75	N/A	3.25	23.5	N/A	4.5

For individual fixture sizes, see corresponding segments of chart. To calculate total row length of combined fixtures, add lengths of each required beginning (BOR), intermediate (INT) and end of row (EOR) fixtures.

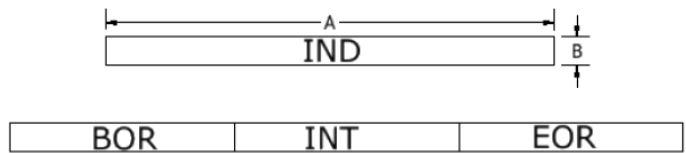

DIAGRAMS NOT TO SCALE

ELECTRICAL CONNECTIONS:

1. Connect the black fixture wire to line voltage, the white wire to neutral, and the green wire to ground. Do not remove or use a different power cord fitting than the one supplied.
2. The mode switching wiring is installed as follows: Connect the yellow wire from each fixture together and to one end of a switch. Connect the orange wire from each fixture together and to the other end of a switch. If using an occupancy sensor instead of a switch, refer to (INS-404) for wiring details.

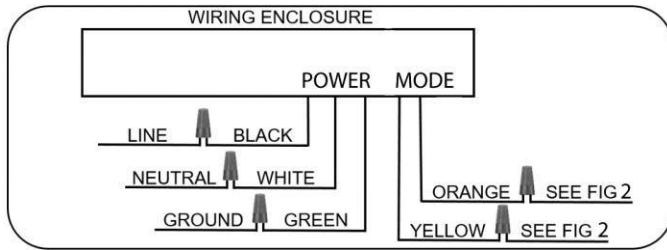


Figure 1: Wiring Diagram

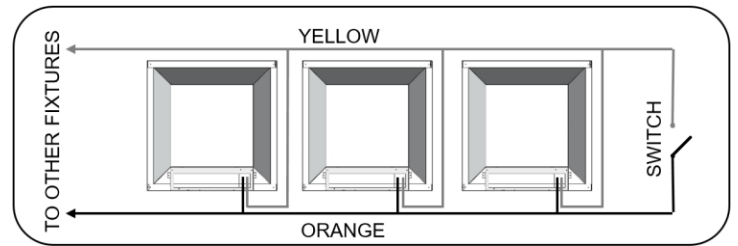


Figure 2: Dual Mode Wiring

Directions for Use:

Dual Mode wiring allows the unit to switch between Antimicrobial+Light Mode and Enhanced Antimicrobial Mode. The wiring is low voltage and comes wired as Normally Open, which means that the unit will be in its default Enhanced Antimicrobial Mode when the orange and yellow Dual Mode wires are disconnected.

Use 'Antimicrobial+Light Mode' when both continuous antimicrobial action and white light illumination are needed and 'Enhanced Antimicrobial Mode,' which is teal-violet in appearance and emits a higher dosage of Vyv's antimicrobial wavelengths, as an antimicrobial cleaning mode for when full illumination is not required.

Refer to Installation Instruction Supplement: (INS-402) for single driver fixtures or (INS-403) for 2 driver system fixtures.

For maximum antimicrobial effectiveness leave the light in "Enhanced Antimicrobial Mode" when white light illumination is not required.

Antimicrobial action stops when the unit is turned off entirely.

Maintenance Instructions:

Turn power off before performing maintenance. Use a soft cloth to clean or dust the fixture. For heavy dirt or residue, use a soft cloth lightly dampened with soap and water or another mild cleanser. Warning: Do not use alcohol, abrasives or harsh solvents. The use of improper cleaning materials or methods can lead to degradation of the lens material which can inhibit the antimicrobial effect of the product.

For troubleshooting Tips, please contact Vyv.

Please refer to the most recent version of Vyv's Product Limited Warranty (LIT-027) to view Vyv's full warranty terms.